



Together with VCH51, Yealink MeetingEye Easy Mode is a BYOD mode allowing MeetingEye 400/600 to be used as a USB VC endpoint. Connecting any platform or meeting just by one cable to the computer, MeetingEye Easy Mode delivers a native, smooth and premium video experience anytime and anywhere.

Part1. Upgrade M400/600 to BYOD/USB mode

Step1: Log in to the web admin page of MeetingEye 400

Check the firmware version and make sure it is the lasted version. If not, click and download firmware:

Download Latest Firmware - 03-03-2021

Standard Version: https://drive.yealink.com:4443/link/38DD9F0E0E56E45893A4E3D7CC2AE1F1

Passcode: manu

Cloud Version: https://drive.yealink.com:4443/link/654F85D7DDC1E222095A0D4162853DB2


Passcode: WpLZ


How to Select firmware?

Features	Standard Version	Cloud Version
	YMS Server	YealinkMeeting
Platform	H.323 account/ H323 IP call	• H.323 IP call
	SIP account/ SIP call	SIP call
svc	X	٧
Contact-LDAP	٧	X
Local Recording; Snapshot;	V	Х
Auto Update	x	٧


Upgrade Path: M400/M600 webpage -> Setting -> Upgrade

- Select Correct firmware and Click "Upgrade All",
- Select "Cross-system Upgrade"

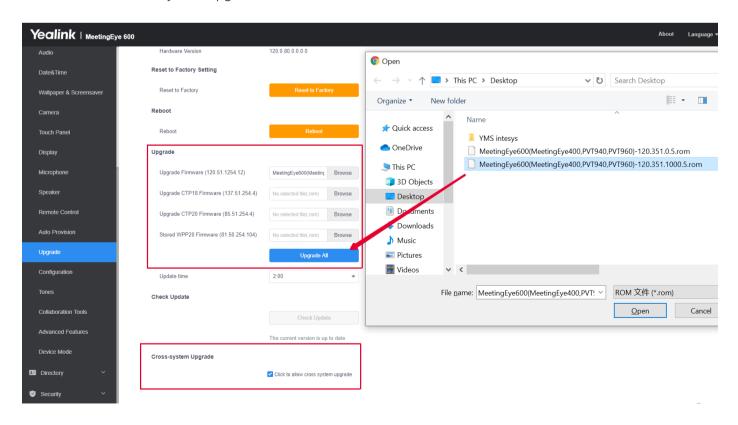

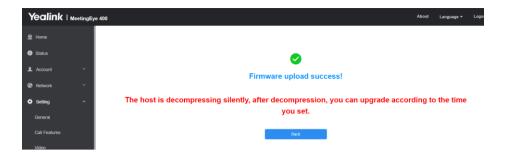

Part2 Easier deployment

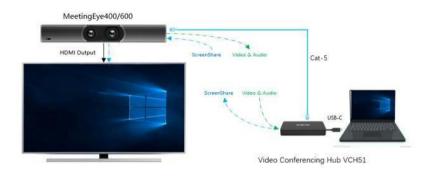




Step1 : Plug in VCH51 (Video conference Hub) on M400/M600 through Ethernet Cable Enter BYOD mode on GUI



Step 2: Connect your laptop via the USB-C cable. Then enter USB mode.

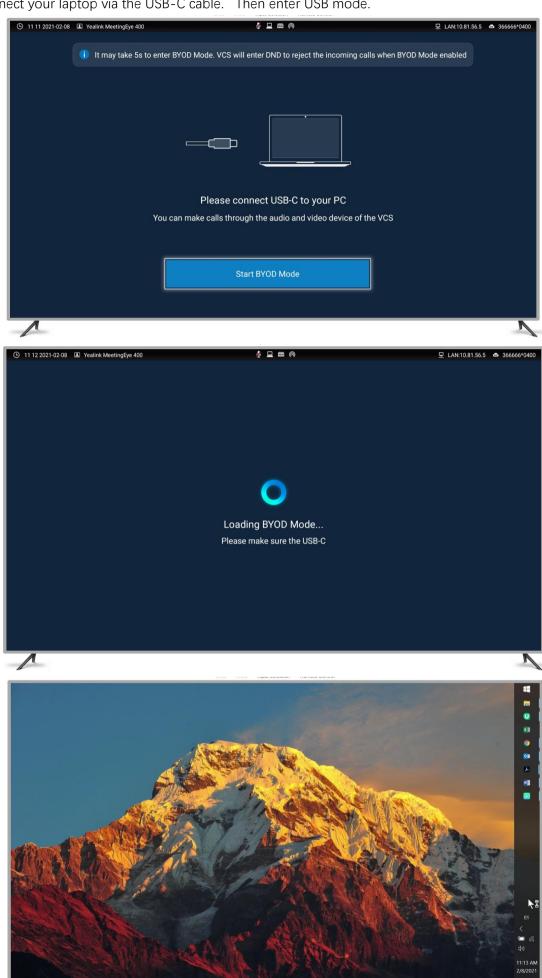

Part3 You can use M400's AI feature: Tracking mode

In USB mode, MeetingEye400 still support Auto Framing and Speaker Tracking.

Step1: Press "OK" button on remote control

Step2: Click "Tracking mode".



Part 4 BYOD mode for Cloud Platform: Zoom/Teams/Yealink Meeting etc.

1. Zoom

You can select Yealink Room Camera and Speakerphone directly.



2. Teams

Select Yealink Room Camera and Speakerphone.



3. Yealink Meeting

Select Yealink Room Camera and Sp

